


Packaging list

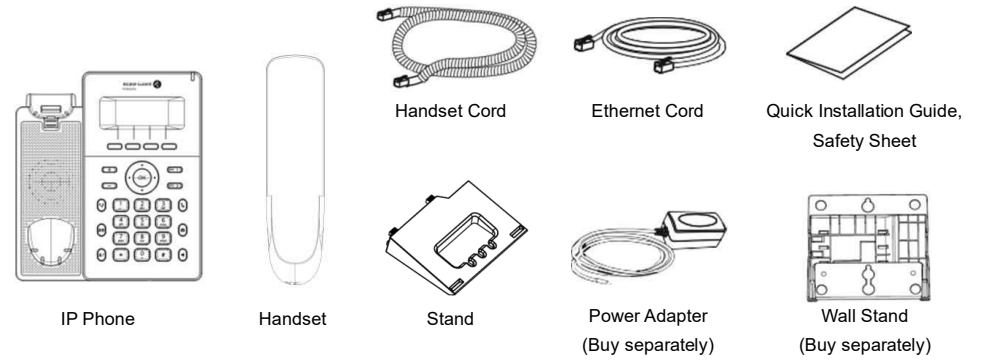

Screen icon

	In hands-free mode		Auto-answering activated		Keypad locked		Call is on hold
	In headset mode		Call Forward activated		Forward call(s)		Internet connected
	In handset mode		Do not disturb activated		Missed call(s)		Internet disconnected
	Mute activated		New VM Messages		Dialed call(s)		VLAN or VPN activated
	Ringer off		Voice Quality Level of call		Received call(s)		Network storm

Keys' function



Soft keys



Left and right navigation keys  
Up navigation key, shortcut to call log  
Down navigation key  
OK key, shortcut to network



Redial key, access to redial the last record



Hold key, Hold/Resume the call



Call transfer key



In idle mode or during ringing: increase or decrease ringer volume  
In communication: increase or decrease earpiece, headset or hands-free volume



Line keys



In idle mode: ringer off  
In communication mode: mute/un-mute a call



Hands-free key, activate/deactivate hands-free



Voice message key


# H2P DeskPhone / H2 DeskPhone Quick Installation Guide






Device Installation

Please follow the instructions in below picture to install the device.

- Bracket desktop installation

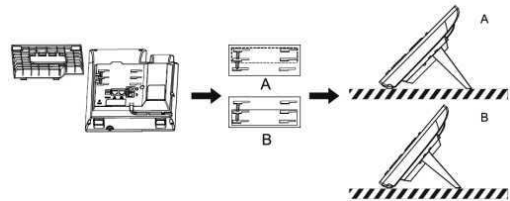

- Wall mounting (Wall Stand to be bought separately)

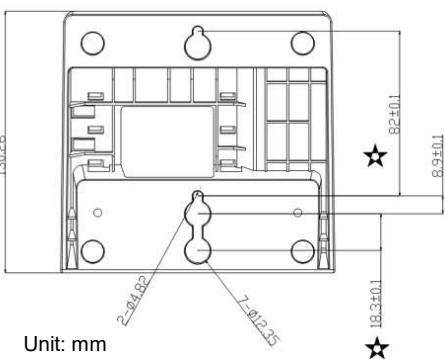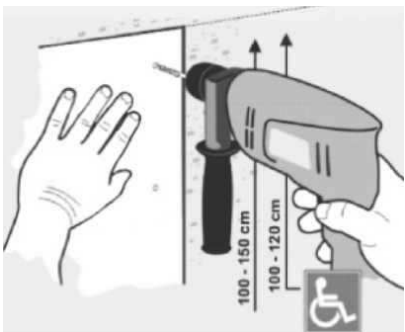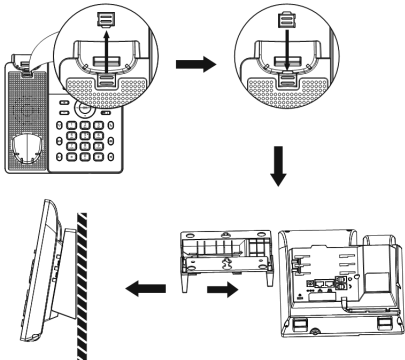


Unit: mm

Connecting the Device

Please connect power adapter, network, PC, headset, and handset to the corresponding ports as described in below picture.

- Power port: connects to the power adapter.
- Network port: connects to local area network.
- PC port: connects to the computer.
- Headset port: connects to headset.
- Handset port: connects to IP Phone handset.

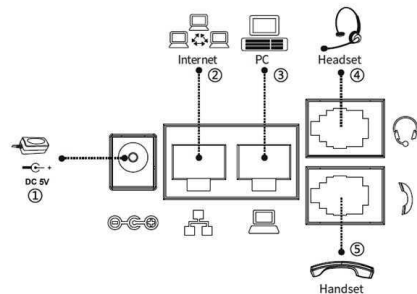

Configuration

Configuration via the Phone

- Press Setting > Admin (Default user password "123456")
- Select IP param: to configure the network settings (IPv4/IPv6/Pv4&IPv6, DHCP/Static IP/PPPoE)
- Select SIP Account: to configure or enable the account, fill the SIP server address, port, user name, password etc.

Configuration via Web

- Get the IP address from the phone: Press OK key, or Setting > Network > IPv4 / IPv6.
- Login: Input https://<IP address> in the web browser. The PC and phone should be in the same IP address segment (Default "username/password" is "admin/123456").
- Configure: Select network/Account etc., and fill the relevant content.
- Save the configuration.

Language setting

- Press Settings > Phone > Language.
- Select the desired language and press OK soft key.

Making a call

- Pre-dialing:** enter the phone number and pick up the handset.
- Direct dialing:** lift the handset and enter the phone number.
- Handsfree:** enter phone number and press or vice versa.
- Designated line:** press line key, enter phone number and press dial key.

Accepting a call

- With the handset:** pick up the handset.
- With the hands-free:** press .

Hold/Resume a call

- Press key or Hold soft key, caller is put on hold.
- To retrieve the call press key or Resume soft key.

**Note:** with more than one active call, select desired call with the navigator keys and use the corresponding soft key to hold or resume.

3-party conference

- Once in line with 1st caller, press Conf soft key, 1st caller is put on hold.
- Then dial the 2nd number.
- After the 2nd call is established, press Conf soft key to set up the conference.

Call transfer

Attended transfer:

- Press key or Xfer soft key during the active conversation, the call is put on hold.
- Dial the second telephone number.
- When the call is answered, then press key or Xfer soft key to complete the operation.

Blind transfer:

- Press key or Xfer soft key during the active conversation, the call will be on hold.
- Then enter the 2nd telephone number and press key or Xfer soft key.

Call forward

- Configure the Call Forward via Web. Select the line, the type of forward, enter the destination number and OK.

Call Mute

- Press to Mute the microphone during the call.
- Press again to un-mute the conversation.

CallLog

- Press key or soft key CallLog
- Scroll through the list using
- To dial an entry, press Dial soft key or pickup handset or press .

Phonebook

Access Phonebook:

- Press soft key More, then press soft key Dir.
- Select Local Contacts or other groups.
- To dial an entry, press Dial soft key or pickup handset or press .

Add new entry:

- Press soft key More > Dir > Local Contacts > All Contacts or Groups > Press Add.
- Enter name and number and press OK soft key.

Programmable keys

- Only Line keys can be programmed through MMI.
- Long press Line Key 1 or Line Key 2, enter Dsskey interface. Select among the configurable items, and select your desired type and value, press OK key.

Redial


- Press key, redial a call number.

Do not disturb

- Press DND soft key, and enable the device do not disturb mode.
- Or press Setting > Phone > DND, and configure the Mode and DND Timer, and press OK soft key.

Voice mail


- To access your voice mailbox, press , number of messages will be indicated if provided by your server or pbx.
- Select the line and press Play to call.

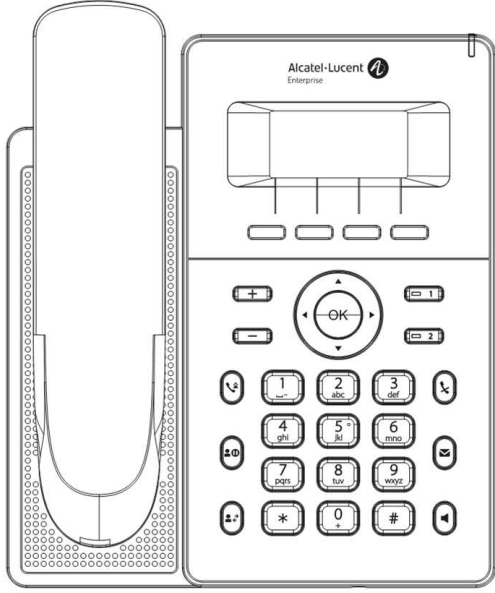

# H2P 桌面话机 / H2 桌面话机 快速安装手册



## 包装清单

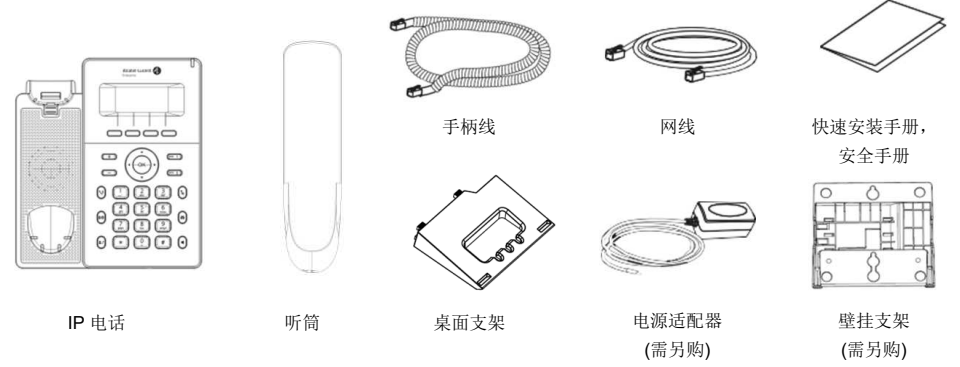

## 屏幕图标显示

	免提模式		启用自动应答		键盘锁定		通话保持中
	耳机模式		启用呼叫前转		已前转的来电		网络连接正常
	手柄模式		启用免打扰		未接来电		网络无连接
	启用 MIC 静音		新语音信息		已接电话		启用 VLAN 或 VPN
	来电铃声关闭		通话语音质量等级		已拨电话		网络风暴

## 按键功能



软按键



左和右导航键  
上翻键，通话记录快捷键  
下翻键

OK 键，网络快捷键



重拨键，重拨上一个拨号记录



保持键，保持/恢复通话



转移键，转移通话



在待机或振铃状态下：增大或减小铃声音量  
在通话状态下：增大或减小耳机、手柄、免提音量



线路键



待机状态下：关闭/恢复振铃音  
通话状态下：关闭/恢复 MIC 语音



免提键，打开/关闭免提通道




语音信息键



## 设备安装

请按照下面图片中的说明安装话机。

### ● 桌面式安装

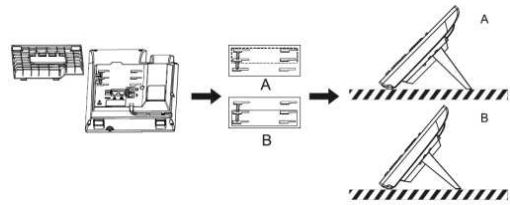


### ● 壁挂式安装（壁挂支架需另外购买）

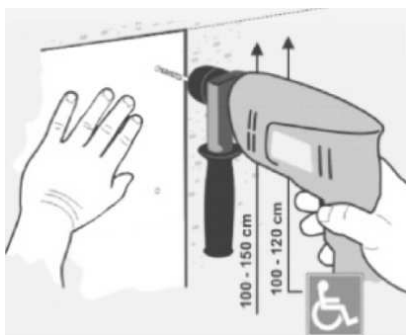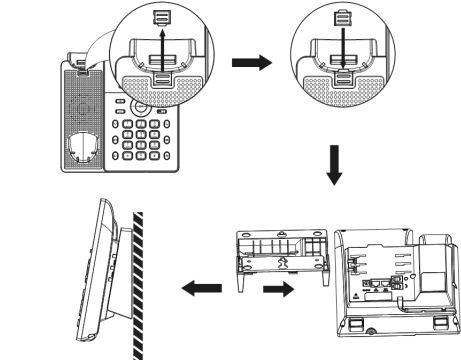

## ● 设备连接

请按下图说明将电源适配器、网络、PC、听筒、耳机连接到相应的端口。

- ① 电源接口：连接电源适配器
- ② 网络接口：连接局域网
- ③ PC 接口：连接电脑的网络接口
- ④ 耳机接口：连接耳机
- ⑤ 听筒接口：连接话机听筒

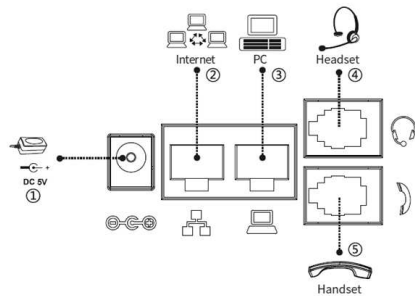

## 配置

### 通过话机配置

1. 按菜单键 > Admin (默认密码“123456”)
2. 选择 IP param > 进行网络设置 (IPv4/IPv6/IPv4&IPv6, DHCP/静态 IP/PPPoE)
3. 选择 SIP Account: 配置启用 SIP 账号, 填写 SIP 服务器地址, 端口, 用户名, 密码等

### 通过网页配置

1. 从设备上获取 IP 地址: 按 OK 键, 或按【菜单】键 > 网络 > IPv4 / IPv6。
2. 登录: 在网页浏览器上输入 https://<IP 地址>。电脑和电话应该处于同一个 IP 地址段, 默认的用户名/密码为“admin/123456”。
3. 配置: 选择网络/线路等, 并填写相关内容。
4. 保存配置。

## 语言设置

1. 按菜单键 > 话机 > 语言设置。
2. 选择需要的语言, 并按下确认键。

## 拨打电话

1. **预拨号:** 先输入电话号码, 再拿起听筒。
2. **直接拨号:** 先拿起听筒, 再输入电话号码。
3. **免提:** 先输入电话号码, 再按下 ; 顺序反之的操作亦可。
4. **指定线路拨号:** 按指定的线路键, 输入电话号码, 再按拨出键。

## 接听电话

1. **使用听筒接听:** 拿起听筒。
2. **使用免提接听:** 按下 .

## 保持/恢复电话

1. 按下 键或【保持】软按键, 可保持通话。
2. 再次按下 键或【恢复】软按键可恢复通话。

**注意:** 当有多个通话存在, 可以使用 导航键选择对应的通话, 并使用相应的软按键来保持或恢复通话。

## 三方会议

1. 当与一路通话在进行中, 按下【会议】软按键, 第一个通话将被保持。
2. 然后输入第二个电话号码进行呼叫。
3. 第二个通话建立, 再按下【会议】软按键, 进入会议模式。

## 呼叫转移

### 指定转接:

1. 与第一个电话号码在通话中, 按 键或【转移】软按键, 通话会被保持。
2. 然后拨打第二个电话号码 (将要转移的号码)。
3. 当通话被接通后, 按 键或【转移】软按键可将通话转移到第二个号码。

### 直转:

1. 与第一个电话号码在通话中, 按 键或【转移】软按键, 通话会被保持。
2. 然后拨打第二个电话号码, 再按 键或【转移】软按键可将通话转移到第二个号码。

## 呼叫前转

1. 通过网页配置呼叫前转。选择线路的前转类型, 输入指定的号码和开启状态, 然后按【确认】软按键。

## 通话静音

1. 按下 可在通话时关闭麦克风。
2. 按下 可恢复麦克风的使用。

## 呼叫记录

1. 按下 键或【历史】软按键。
2. 滚动浏览列表
3. 选择一个号码, 按下【拨出】软按键或拿起听筒, 或按下 .

## 电话本

### 访问电话本:

1. 按下软按键【更多】, 再按软按键【话簿】。
2. 选择全部联系人或者其他分组。
3. 选择一个号码, 按下【拨出】软按键或拿起听筒, 或按下 .

### 添加新号码:

1. 按下软按键【更多】>【话簿】>本地联系人 > 全部联系人或者其他分组, 按下【添加】。
2. 输入名称和号码, 按下【确认】软按键。

## 可编程按键

1. 只有线路 1, 线路 2 按键可以通过 MMI 编程。
2. 长按线路 1 或线路 2 键, 进入功能键配置界面, 在可配置项中选择所需的按键, 类型和参数并按【确认】软按键。

## 重拨

1. 按下 键, 重拨上一个呼叫号码。

## 免打扰

1. 按下【免扰】软按键, 直接开启设备免打扰模式。
2. 或按下软按键【菜单】>话机 > 免扰, 配置模式和定时器, 并按下【确认】软按键, 开启线路或设备免打扰模式。

## 语音留言

1. 若要访问您的语音邮箱, 请按 。如果您的服务器或 PBX 有未读消息, 则会显示消息的数量。
2. 选择线路并按播放。